

## Reset procedure for Brother MFC-L2710DN/MFC-L2710DW

- 1) Open the printer Front-cover;
- 2) Press **Clear** and **Stop/Exit** button at the same time and then press **Clear** one more time. This step must be done very quickly;



- 3) Press the **down-arrow** button and select **K.TNR-HC**;
- 4) Press **OK** to confirm the reset process and **Accepted** will appear on the printer's display. Picture below is showing the buttons mentioned on the Step 3 and 4:



- 5) Close the printer Front-cover;
- 6) Printer is now ready for printing.

## Reset procedure for Brother HL-L2310D

1. Open the front cover and leave it open while completing the following steps:
2. Turn the printer off.
3. Hold the 'go' button (or 'start' button) while turning the printer on. All panel lights should be on.
4. Release the 'go' button (or 'start' button).
5. Press the 'go' button (or 'start' button) 2 times.
6. Pause. All panel lights should be on.
7. Press the 'go' button (or 'start' button) 5 times. The toner light should be off (the error may be flashing). The paper light should be on or flashing.
8. Close cover. The ready light should be the only light on.

## Reset procedure for Brother HL-L2350DW/HL-L2357DW/HL-L2370DN/HL-L2375DW

- 1) Open the printer Front-cover;
- 2) Press **Back** and **Go** button at the same time and then press **Back** one more time. This step must be done very quickly;




- 3) Press the **down-arrow** button and select **TNR-HC**;
- 4) Press **OK** to confirm the reset process;
- 5) Press the **down-arrow** button and **Accepted** will appear on the printer's display. Picture below is showing the buttons mentioned on the Step 3 and 4 and 5:




- 6) Close the printer Front-cover;
- 7) Printer is now ready for printing.

## Reset procedure for Brother MFC-L2730DW / MFC-L2750DW


- 1) Open the printer Front-cover;
- 2) Press **Back** and **Stop** button at the same time and quickly release, then press **Back** again within 2 seconds:

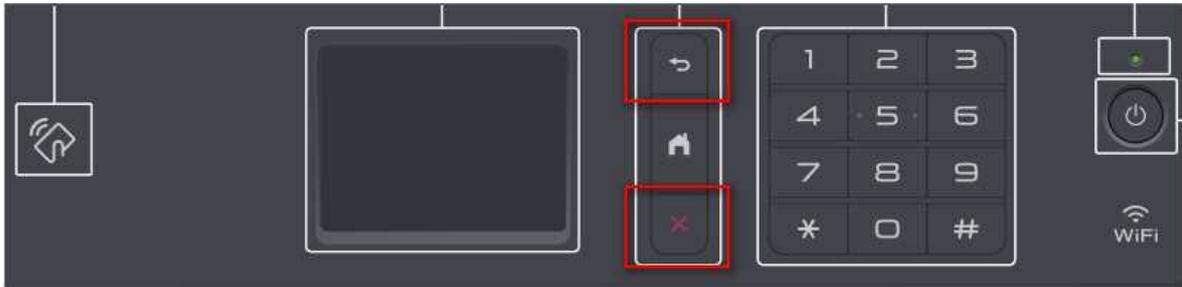

- 3) Printer shows on the display the **Reset Menu** as follow:

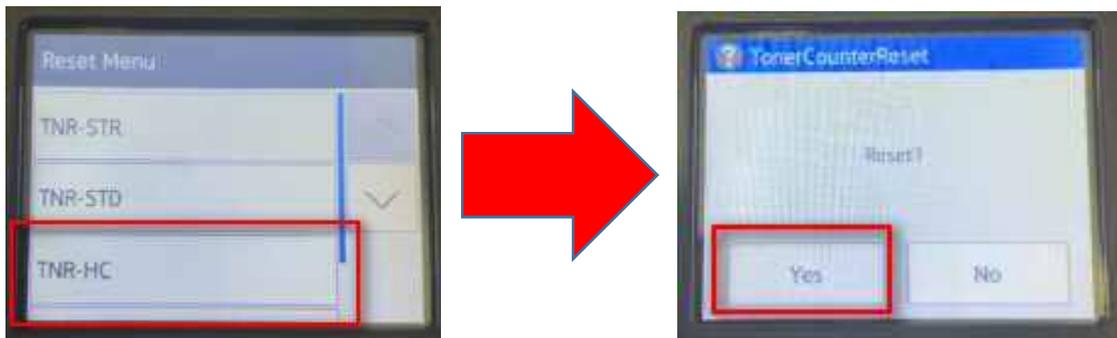

- Select **TNR-HC** from the touch screen display and hit **Yes** for confirmation;
- 4) **Accepted** will appear on the printer's display;
  - 5) Close the printer Front-cover;
  - 6) Press the **Home** button on the printer to return to the main Menu

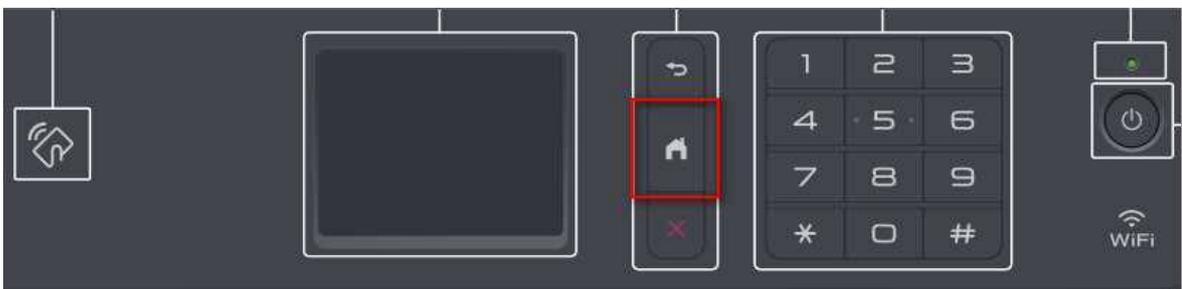

- 7) Printer is now ready for printing.

**RESET PROCEDURE "REPLACE TONER " MESSAGE FOR DCP=L2550 DW -HL-L2390DW- MFCL2710W**



1. Open printer FRONT COVER
2. Press CLEAR and STOP/EXIT button at the same time and then CLEAR one more time.  
This step must be done quickly
3. Press down arrow button and select K.TNR-HC (TN760)
4. Press OK to confirm the reset process and ACCEPTED will appear on the display
5. Close printer FRONT COVER
6. Printer is now ready for printing